

WARNING MESSAGES

EEEE Overload warning.
unSt Unstable surface warning.
out2 Load cell is permanently damaged.
🔋 Low battery warning.

PRODUCT SPECIFICATIONS

Model: SC115KS
Capacity: 11 lb. (5,000 g.)
Graduation: 0.1 oz. (1 g.)
Dimensions: 6 inches x 10 inches x 3/4 inch
Power Source: 3 AAA batteries (included)
Automatic off: 5 minutes

LIFETIME LIMITED WARRANTY

This scale is guaranteed to be free of defects in materials and workmanship.
For more details visit: www.escali.com/warranties

ESCALI CORPORATION


3203 Corporate Center Drive, Suite 150
Burnsville, MN 55306
USA

PRODUCT SUPPORT

24/7 Online support: <https://escali.zendesk.com>
Email support: feedback@escali.com
Phone support: 1-800-467-6408

SmartConnect Kitchen Scale

Model # SC115KS

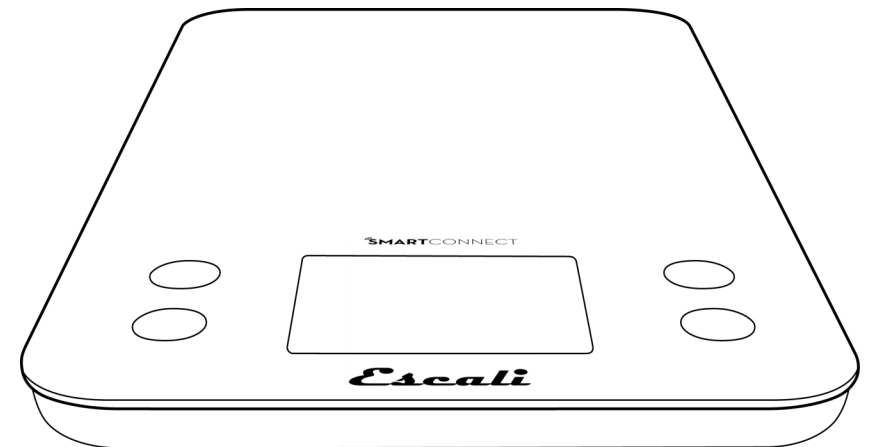

Escali's liability is limited to two (2) times the cost of the product. © Escali Corp., Minneapolis, MN, USA. All rights reserved. Escali, the Escali logo and other Escali marks are owned by Escali Corp. and may be registered. The Bluetooth® SMART word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. Apple and the Apple logo are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc. Google Play is a trademark of Google Inc.

INITIAL SETUP

1. Remove your scale from the protective bag and insert the batteries. Place the scale on a flat surface.
2. To complete setup and pair your scale to the Escali SmartConnect mobile app, please visit: www.escali.com/setup

MOBILE DEVICE REQUIREMENTS

To view mobile device requirements online, please visit:

www.escali.com/smartconnect/devices

PRODUCT SUPPORT

24/7 Online community support: <http://escali.zendesk.com>

Email support: support@escali.com

Phone support: 1-952-469-1965

WEIGHT MEASUREMENTS

1. Press the power [⏻] to turn the scale on.
2. Press UNIT [UNIT] to change units (pounds, ounces, grams.)
3. Place an item on the scale in the center of the platform.

TARE (ADD & WEIGH)

Ignore the weight of a container:

1. Place a container on the platform before turning the scale on.
- OR-

1. Turn the scale on, add the container and press TARE [TARE].
2. Wait 3 seconds and zero weight will display.
3. Add items into the container to be weighed.

Find the individual weight of multiple items in one container:

1. Press TARE [TARE] to reset the scale back to zero weight.
2. Add additional items to be weighed.
3. Repeat steps 1-2 for each additional item.

Reset the scale back to zero weight:

1. If nothing is on the scale and it does not read zero weight, press TARE [TARE] to reset the scale back to zero weight.

Attention! The scale will tare any amount of weight. Once the total weight actually on the scale reaches the maximum capacity of 11 pounds (5000 g.) the overload warning code (EEEE) will display.

KITCHEN TIMER

1. Press the timer symbol [⌚] to enter into the timer feature.
2. Press UNIT [UNIT] to change numbers. Press [⌚] to confirm.
3. After selecting the last number, press [⌚] to start the timer.

4. Press [⏻] to switch back into scale mode. The timer will continue to run. Press [⌚] to switch back into timer mode.
5. To reset the timer, press and hold [⌚] while in timer mode.
6. Press [⏻] to turn off the alarm.

BLUETOOTH® SMART

Bluetooth® SMART wireless technology, also known as Bluetooth® Low Energy or BLE, enables the Escali SmartConnect Kitchen Scale to automatically send weight measurements to the Escali SmartConnect mobile app for enhanced functionality.

TOUCH SENSITIVE CONTROLS

- Light contact with the surface of the controls will activate them.
- Pressing hard on the controls will cause the scale to malfunction.
- You must operate the controls with bare hands.

AUTOMATIC SHUT-OFF

The scale will turn off after 5 minutes of inactivity to save battery.

BLUE BACKLIGHT DISPLAY

- The backlight will turn on when adding items onto the scale.
- The backlight turns off automatically after 18 seconds of inactivity.

SOUNDS

- To silence the confirmation beep, press and hold UNIT [UNIT]. The kitchen timer alarm will not be silenced.
- To reactivate the confirmation beep, press and hold UNIT [UNIT].

PROPER USE & CARE

- Use and store the scale at room temperature.
- Use on a flat, level and stable surface.
- The scale is an instrument of precision. Do not submit the scale to shaking, excessive vibration or other rough treatment.
- The display may be affected by electromagnetic disturbances such as radios, microwaves or cell phones. If such disturbances occur, remove the source of the disturbance & restart the scale.
- Disassembling or tampering with the scale voids the warranty.
- Clean the scale with dish soap and a damp cloth.
- Do not submerge in liquid. The scale is not waterproof.