

# *Escali*<sup>®</sup> *Measuring What's Next*<sup>™</sup>


## Model: Velo, Travel Scale

Thank you for purchasing an *Escali* Digital Scale

Please read the following operation information to ensure the proper function of your new scale.

### I. **Before using your Travel scale:**

Open the battery door at the back of the scale by using the hook.

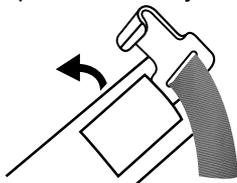


Remove the insulating plastic strip from the battery and ensure the +/- terminals are correctly placed as shown inside the battery compartment. This scale operates on 1 - CR2032 lithium battery (included).

### II. **Select unit before use:**

Press the “⏻” key to turn the scale on. Immediately press the “⏻” key again to change the scale to the measuring unit of your choice (Lbs, Kg or St). When selected please wait 2 seconds for the scale to calibrate, your scale will go to weighing mode and will show zero on the display.

### III. **Weighing your luggage:**

Press the “⏻” key to turn the scale on. Your scale will calibrate and goes to weighing mode (zero will show on the display). Strap the handle on your luggage and lift your travel scale up.

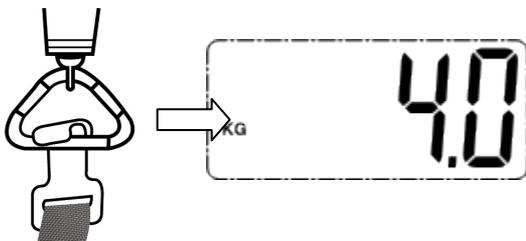

As soon as the weight is stabilized your scale will beep and the readout on the display will be locked.

If there is a weight shown on the display before weighing, press the “Ⓢ” key to reset the scale to zero.

### **Do not hang overweight items on the scale:**

Weighing items over the maximum weight capacity will cause an overload “EEEE” error to display. Immediately remove overweight items to avoid causing damage to your scale.

### **Battery Replacement:**

Replace the batteries when the low battery symbol appears on the display.

### **Additional Information:**

- 1) Make sure your scale is at room temperature.
- 2) This scale is not waterproof. Do not expose to moisture.
- 3) As this scale is a precision instrument, it must be handled with care. Avoid rough treatment.
- 4) Do not disassemble this scale or the warranty will be void.
- 5) The display value may be affected by electromagnetic disturbances such as operating near a radio. If this occurs, move the device that is causing the disturbance and turn the scale off and restart.

### **Specifications**

- Capacity:** 110 Pound / 50 Kilogram  
**Increments:** 0.2 Lb / 0.1 Kg  
**Weight Modes:** Pounds, Kilograms or Stone  
**Auto Shut Off:** Turns off after 25 seconds of non-use.  
**Power Source:** One CR2032 Lithium battery



Escali's liability is limited to two (2) times the cost of the product.