

ESCALI CORPORATION
3203 Corporate Center Drive, Suite 150
Burnsville, MN 55306


PRODUCT SUPPORT
24/7 Online support: <https://escali.zendesk.com>
Email support: feedback@escali.com
Phone support: 1-800-467-6408

Escali

**PRODUCT
MANUAL**

SmartConnect Body Scale

Model # SC200BS

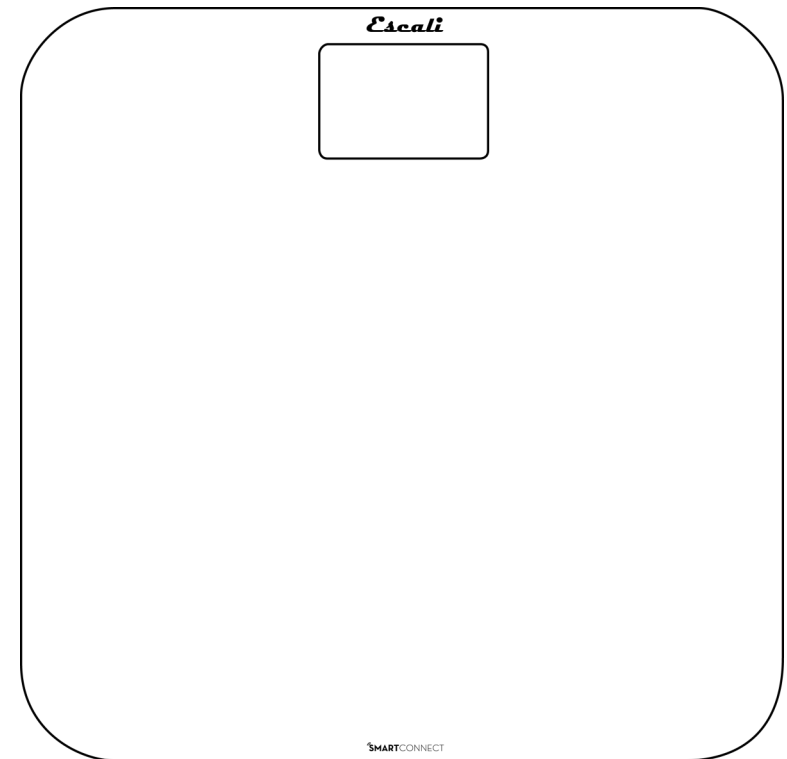

Escali's liability is limited to two (2) times the cost of the product. © Escali Corp., Minneapolis, MN, USA. All rights reserved. Escali, the Escali logo and other Escali marks are owned by Escali Corp. and may be registered. The Bluetooth® SMART word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. Apple and the Apple logo are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc. Google Play is a trademark of Google Inc.

www.escali.com

INITIAL SETUP

1. Remove your scale from the protective bag and insert the batteries. Place the scale on a flat surface.
2. To complete setup and pair your scale to the Escali SmartConnect mobile app, please visit: www.escali.com/setup

MOBILE DEVICE REQUIREMENTS

To view mobile device requirements online, please visit:

www.escali.com/smartconnect/devices

WEIGHT MEASUREMENTS

1. Step onto the center of the scale, it will turn on automatically.
2. Step off after weight is displayed. The scale will turn itself off.
3. Press the button underneath the scale to change units.

BLUETOOTH® SMART

Bluetooth® SMART wireless technology, also known as Bluetooth® Low Energy or BLE, enables the Escali SmartConnect Body Scale to automatically send weight measurements to the Escali SmartConnect mobile app for enhanced functionality.

INSTANT-ON TECHNOLOGY

The scale will turn on automatically when weight is applied to the platform.

DISPLAY HOLD

Your weight will stay on display for 15 seconds after the measurement is taken, even if you step off the scale.

AUTOMATIC SHUT-OFF

The scale will turn off after 15 seconds of inactivity to save battery.

LARGE BACKLIGHT DISPLAY

- The backlight will turn on when adding items onto the scale.
- The backlight turns off automatically after 18 seconds of inactivity.

PROPER USE & CARE

- Use and stow the scale at room temperature.
- Use on a flat, level and stable surface.
- The scale is an instrument of precision. Do not submit the scale to shaking, excessive vibration or other rough treatment.
- The display may be affected by electromagnetic disturbances such as radios, microwaves or cell phones. If such disturbances occur, remove the

source of the disturbance & restart the scale.

- Disassembling or tampering with the scale will void the warranty.
- Clean the scale with dish soap and a damp cloth.
- Do not submerge in liquid. The scale is not waterproof.

WARNING MESSAGES

---- Overload warning.

▣ Low battery warning.

LIFETIME LIMITED WARRANTY

This scale is guaranteed to be free of defects in materials and workmanship. For more details visit: www.escali.com/warranties

PRODUCT SPECIFICATIONS

Model: SC200BS

Capacity: 440 lb. (200 kg.)

Graduation: 0.2 lb. (0.1 kg.)

Dimensions: 12-5/8 inches x 12-5/8 inches x 1 inch

Power Source: 4 AAA batteries (included)